



ARMATURNI NACRT VANJSKIH ZIDOVA PRIZEMLJA......M 1:50

d=20 cm, C25/30, cnom = 2,5 cm

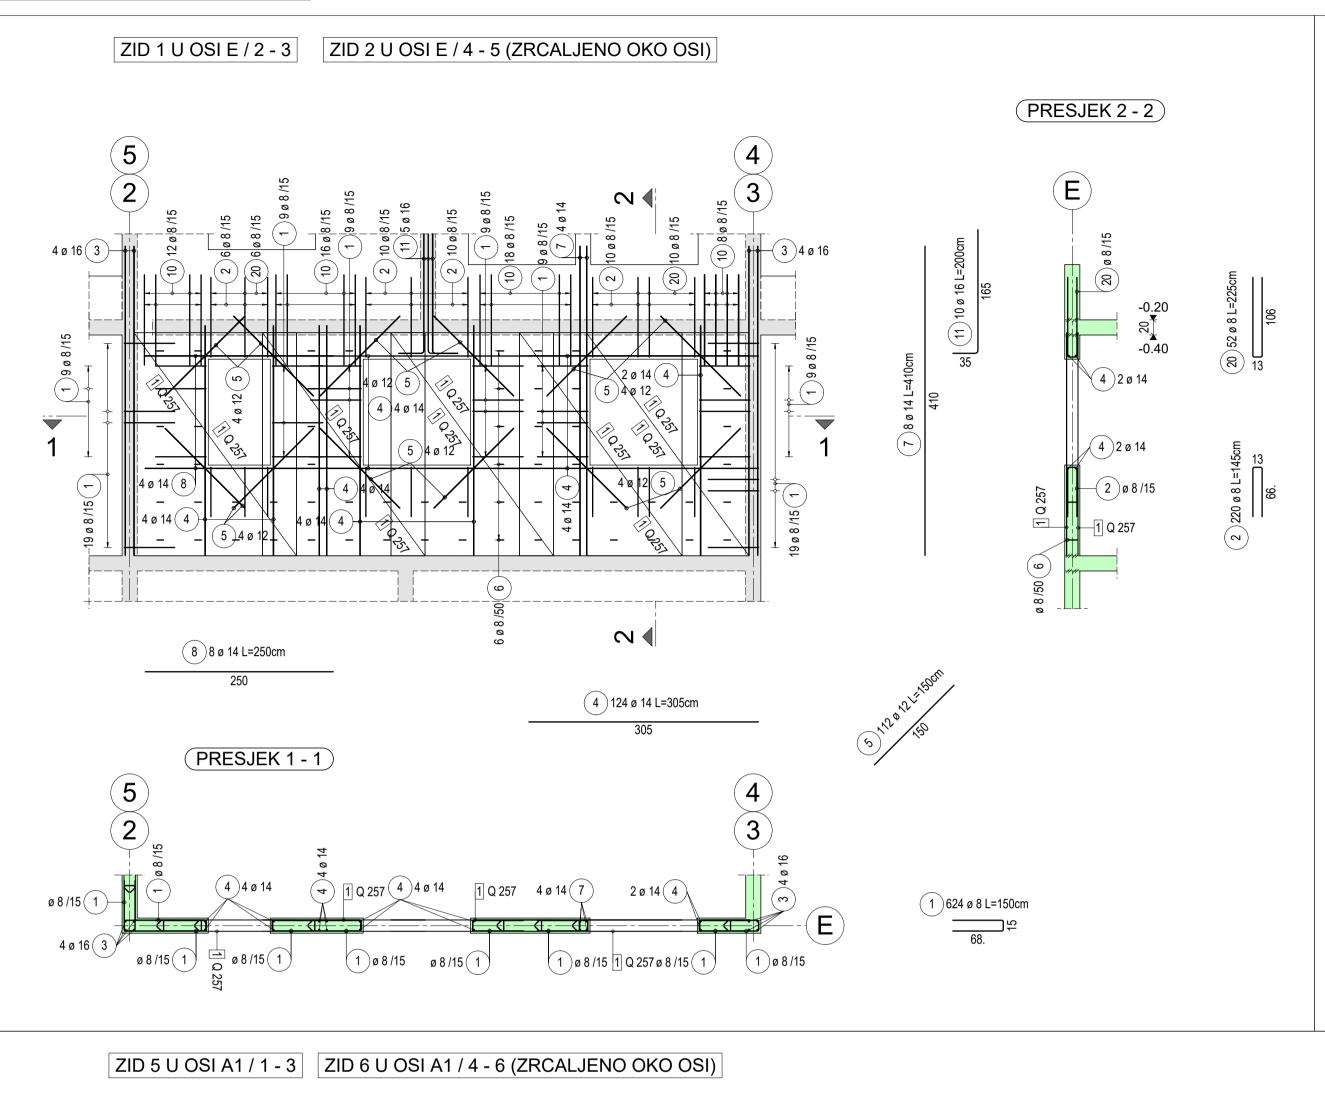

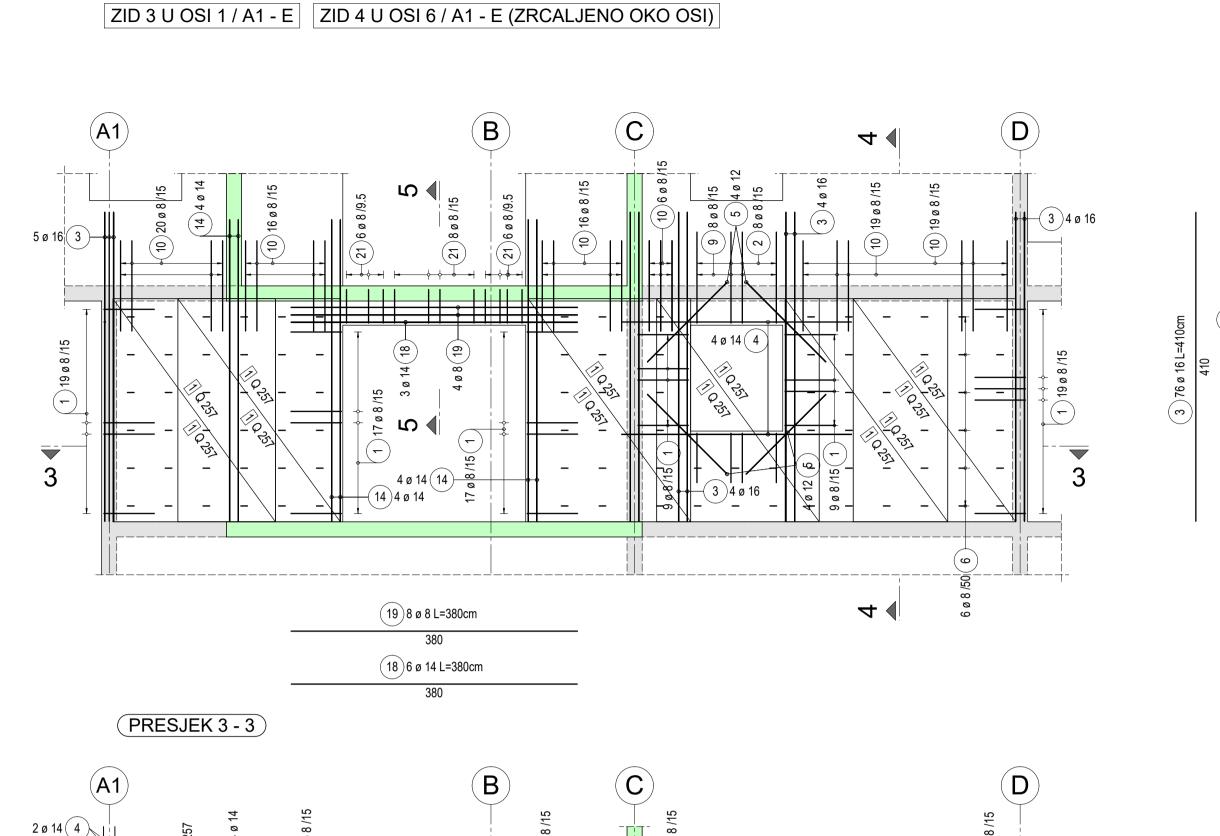

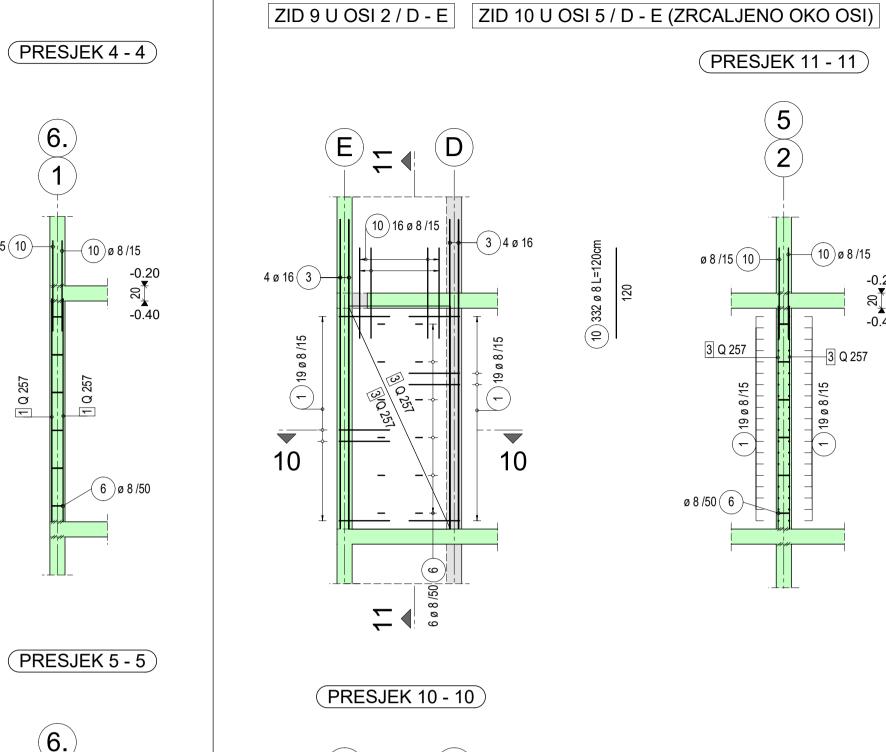


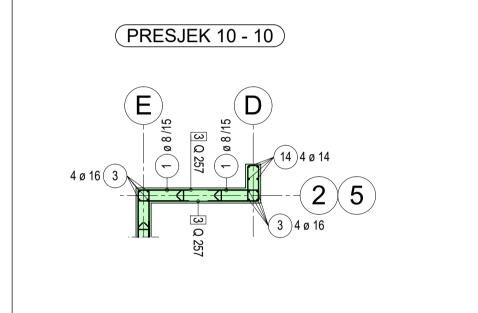



Poz. Komad Oznaka mreže. Dužina [m]

2.950

Uk. težina [kg]:

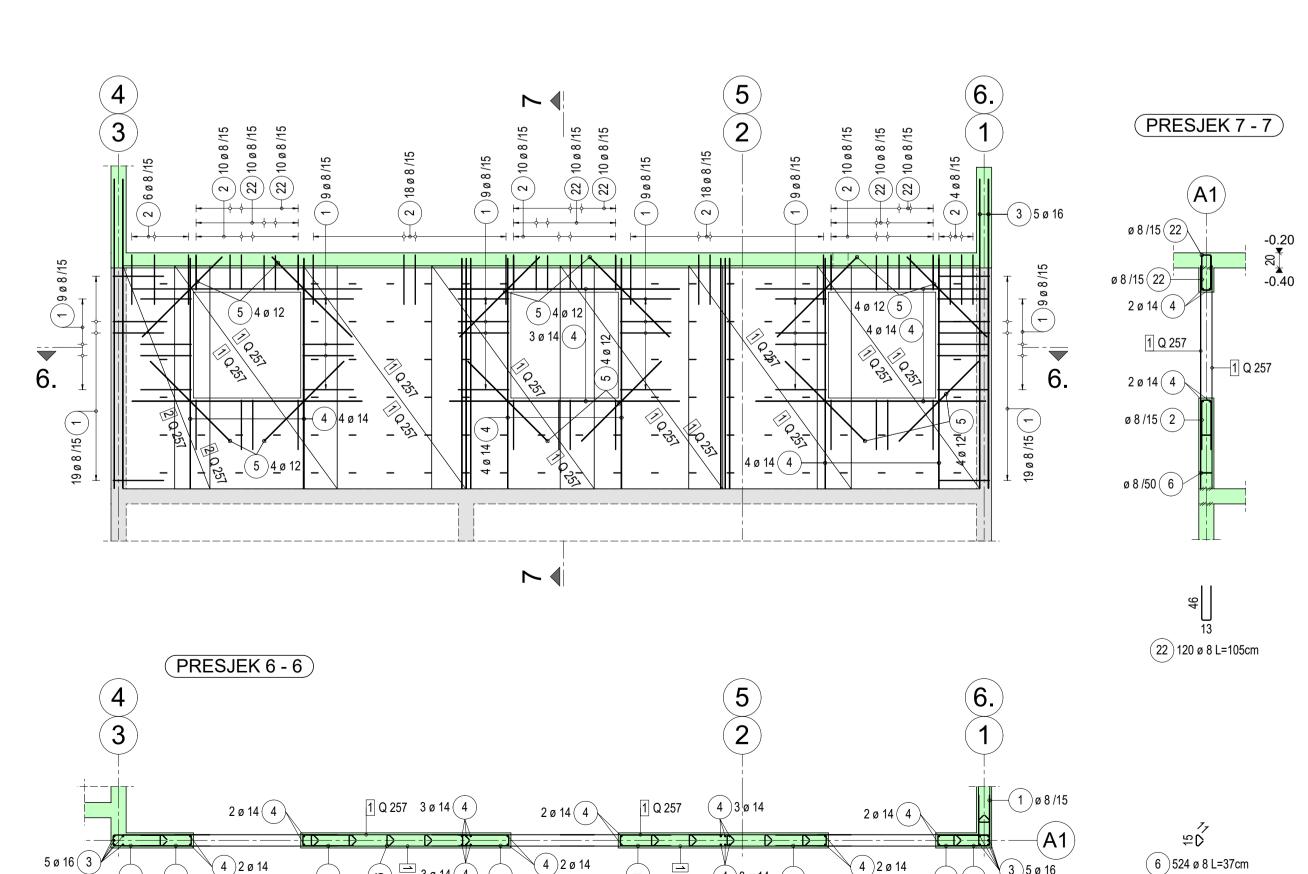

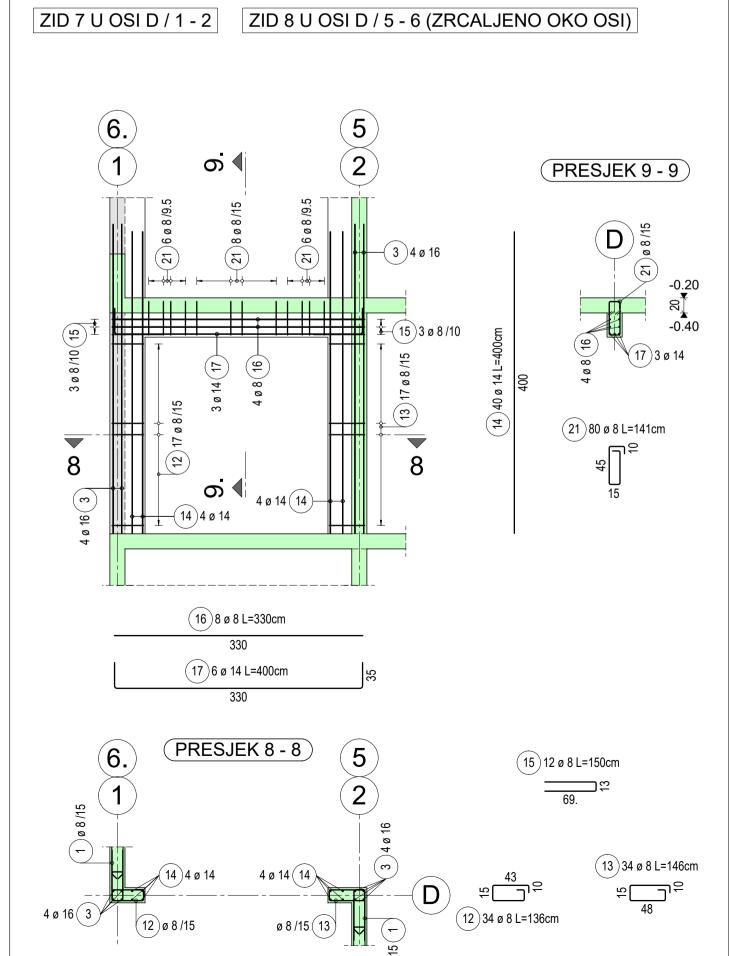


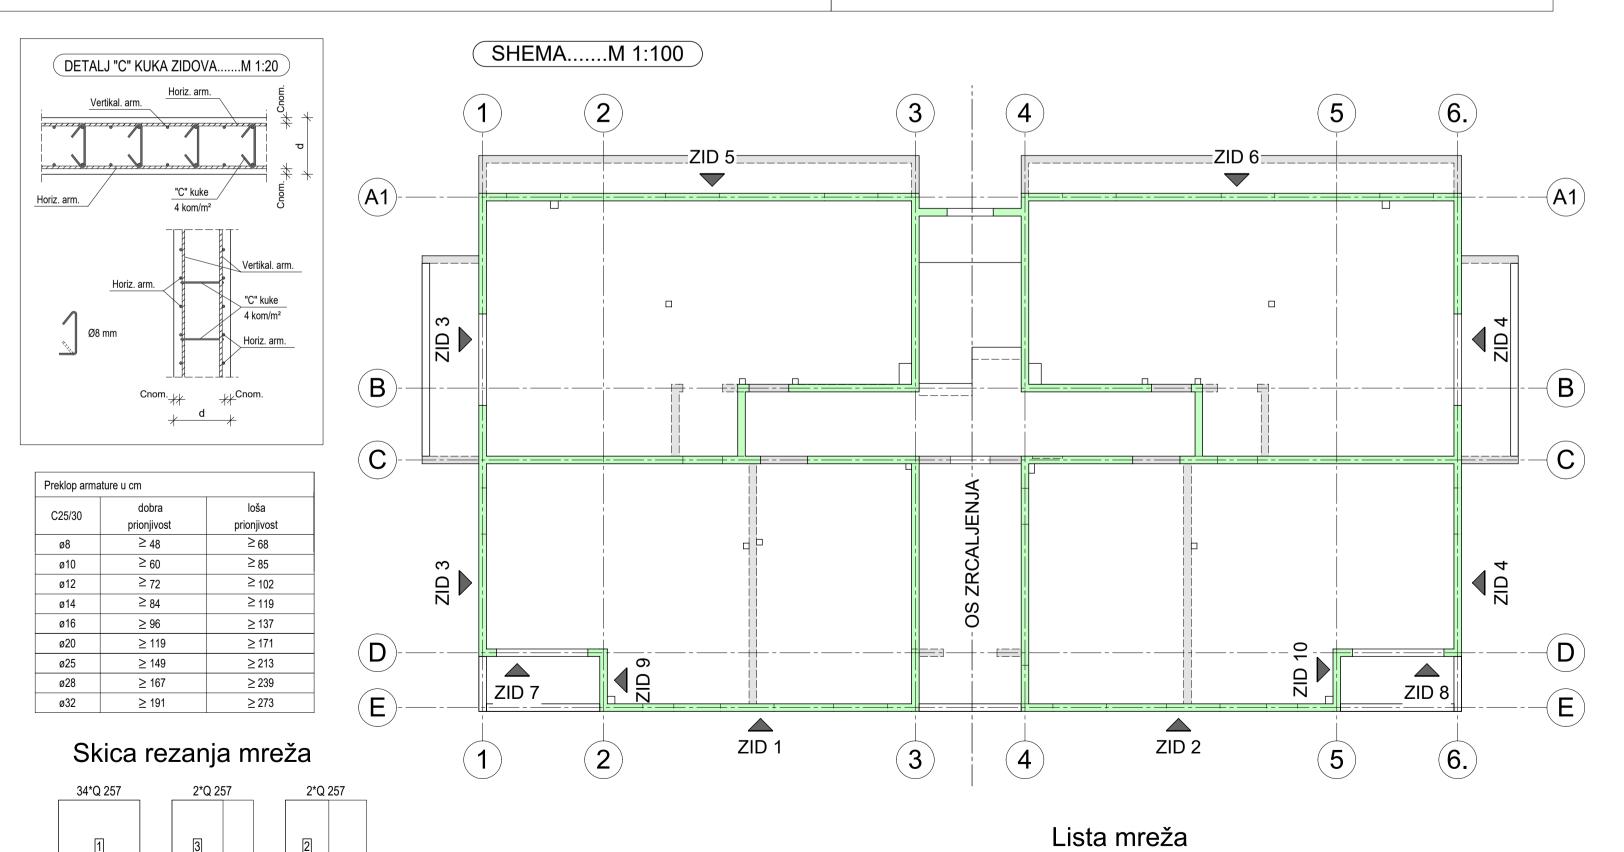

 D broj
 Opis
 Bruto [kg]

 38
 Q 257
 2021.60

 38
 Zbroj
 2021.60

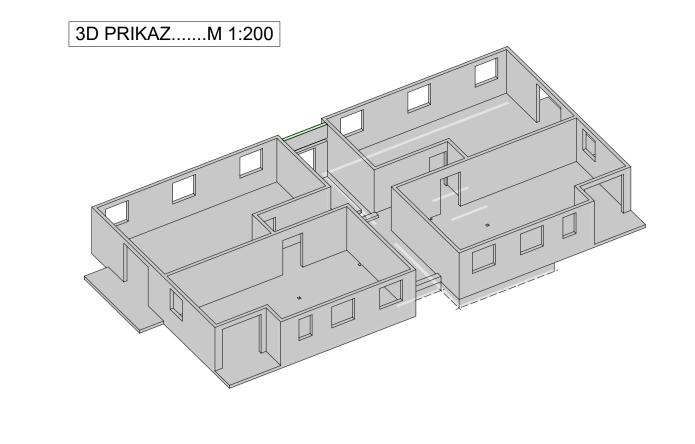

OBRADA RADNIH REŠKI:

- 1. PRIJE POSTAVLJANJA SVJEŽEG BETONA NA RADNOJ REŠKI UKLONITI POVRŠINSKI SLOJ BETONA.
- 2. PJESKARENJEM ILI DRUGIM METODAMA OBRADITI RADNU REŠKU DO
- POJAVE ČISTOG AGREGATA.
- 3. SVE RADNE REŠKE NEPOSREDNO PRIJE BETONIRANJA ISPRATI VODOM I
- OSTAVITI DA SE OSUŠI.
- 4. POVRŠINA BETONA NA RADNOJ REŠCI MORA OSTATI GRUBO OBRAĐENA.
- 5. PRIJE BETONIRANJA RADNU REŠKU ZALITI CEMENTINIM MLIJEKOM. 6. PREDUZETI MJERE IZBJEGAVANJA SEGREGACIJE, OSOBITO KOD
- HORIZONTALNIH RADNIH REŠKI.

NAPOMENE:

- Sve dimenzije prekontrolirati na gradilištu.
- Armatura zidova: horizontalna armatura montira se s vanjske strane.
- Prikazani prekidi betoniranja (radna reška) nisu obvezujući.
- Nacrt je valjan samo uz odgovarajući izvedbeni arhitektonski i oplatni nacrt. - Temeljnu ploču polagati na minimalno 5 cm izravnavajućeg sloja mršavog betona.

2	Promjer šipke		
	mm		>100 mr i > 7 Ф
	Φ < 20		7 Ф
	4 Φ		>50 mm i > 3 Ф
<u> </u>		The same of the sa	15 Ф

KVALITETA E	ŠIPKE:				
ELEN	MENT	KLASA IZLOŽENOSTI	KLASA BETONA	ZAŠTITNI SLOJ BETONA	B500B
Vrovna plača	gore	XC3	C25/30	25 mm	
Krovna ploča	dolje	XC3	C25/30	25 mm	MREŽE: B500A
Stubište	gore	XC3	C25/30	25 mm	DOUG
Stubiste	dolje	XC3	C25/30	25 mm	
Stronno pložo	gore	XC3	C25/30	25 mm	
Stropne ploče	dolje	XC3	C25/30	25 mm	
Zidovi katova	van	XC3	C25/30	25 mm	
	unutra	XC3	C25/30	25 mm	
Vanjski zidovi podruma	van	XC2	C25/30	30 mm	
	unutra	XC2	C25/30	30 mm	
Stropna ploča podruma	gore	XC3	C25/30	25 mm	
	dolje	XC3	C25/30	25 mm	
Tamalina plaža	gore	XC2	C25/30	40 mm	
Temeljna ploča	dolje	XC2	C25/30	40 mm	

b	24.10.2023.	Promjena geometrije	TM
а	20.07.2023.	Početna verzija	TM
Verzija:	Datum	VRSTA PROMJENE	Izradio

55.96